


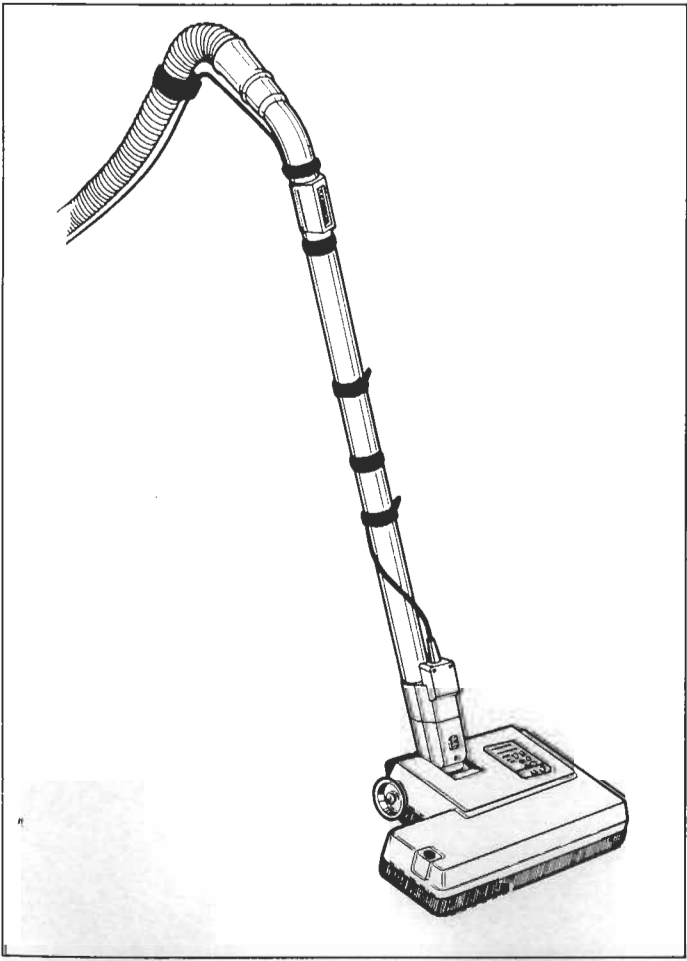

Brush motor 150 Watts
 Brush width 325 mm
 Brush strip replaceable
 Brush drive non slip drive belt
 with electronic overload protection
 Width 353 mm
 Weight 3 kg
 Protection double insulated

Technical Details


Instruction Manual Power Head SEBO 350e




SEBO Australia, Unit 11/55 Fourth Ave, Blacktown, NSW, 2148.
 Ph: +61 (0)2 9678 9577, Fax: +61 (0)2 9678 9755, www.sebo.com.au

Preparation


Never run over the cable with the power head.
Always carry the machine over steps and sills.

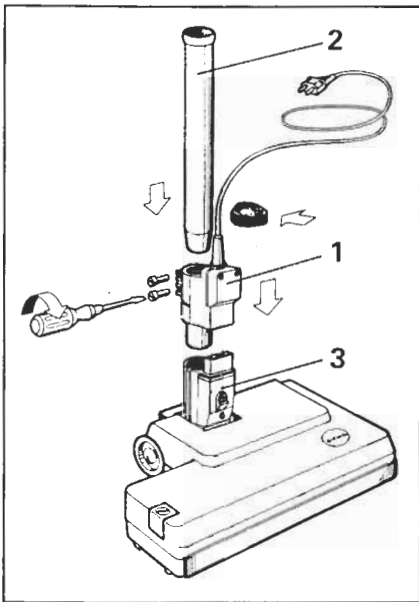

Slot the suction tube (2) into the adaptor (1) and tighten the two screws. Then fix the cable with the six cable clips to the tube and the hose. Press the button and slot the adaptor into the swivel neck (3) until it locks.

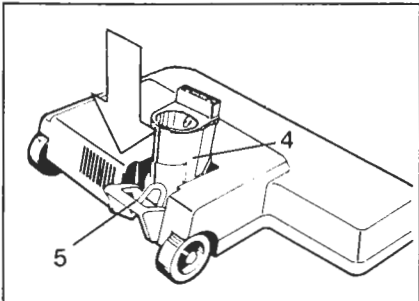

To release machine from upright position (4) press down foot pedal (5).

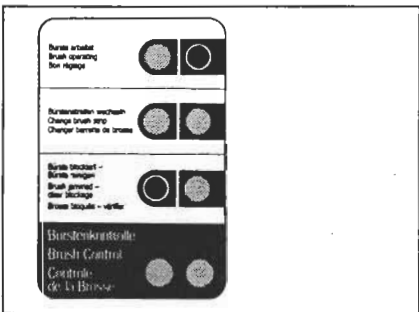

The electronic brush controller monitors the operation of the brush.

Green light:

Brush correctly set and running.

Green light and red light:


The brush strip is worn out and must be changed.

Red light:

The brush has become blocked and is not turning. Switch off, unplug from the mains and clear the blockage.

Maintenance


Caution – Always unplug machine at mains outlet before dismantling any part of the machine.

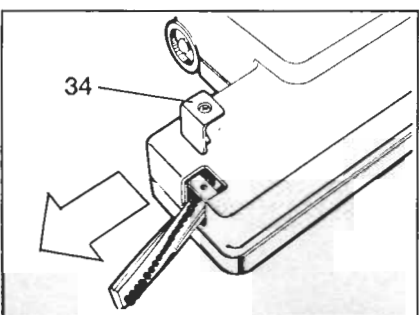


To replace brush strip: Remove brush strip cover (34). Turn brush roller so that the brush strip can then be pulled out. Ensure that the new brush strip is fully inserted. Replace the brush strip before the bristles wear down to the level of the support rod.

Service Instructions


Caution – The work detailed below should only be carried out by persons qualified to repair electrical appliances.!

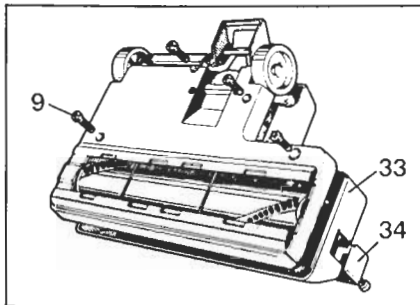


To remove the power head cover (33) take off the brush strip access cover (34), remove the four large screws (9) from underneath the chassis. Then with the swivel neck lowered and the red reset button (25) pressed in, lift off the cover.

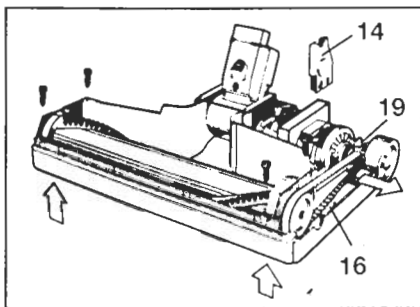


When removing brush roller and drive belt (16): Remove bearing plate (14). Unloop the belt from the motor pulley (19). Always lift out roller and bearing blocks evenly. When replacing, loop the drive belt over the clutch and the pulley insert left hand bearing block in its slot first, then push both bearing blocks downwards, keeping the brush roller parallel with the chassis.

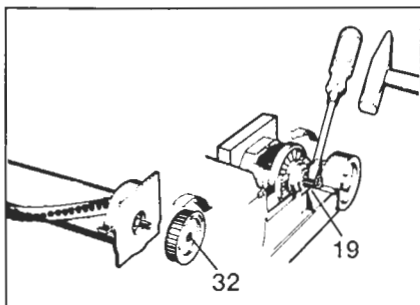


To remove the brush roller pulley (32) hold the roller in one hand and turn the pulley in a clockwise direction. To remove the motor pulley (19) insert a screwdriver into a groove and give a light tap in an anti-clockwise direction. The loosened pulley can then be removed.

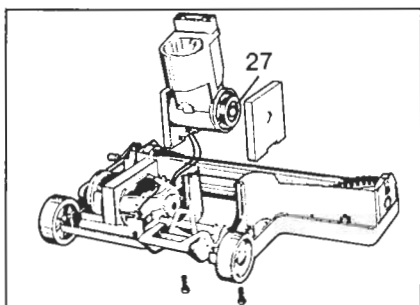

To remove the swivel neck take out the two small screws from underneath the chassis near the voltage label, then lift the swivel neck assembly from the chassis. The plastic bearings (27) can be removed by pulling them off. When replacing a plastic bearing ensure that it is fully pushed home over the four sections on the swivel neck.

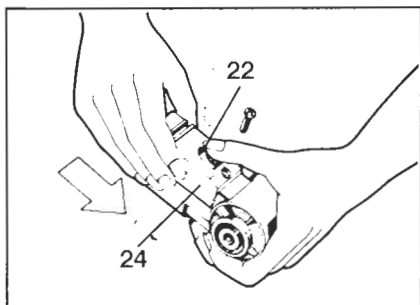


To remove the swivel neck cover (24) take out the retaining screw, depress the plunger (22) and slide the cover downwards. When replacing, ensure that the spring is in place and that the cover is pressed fully down, then pushed back into its original position.

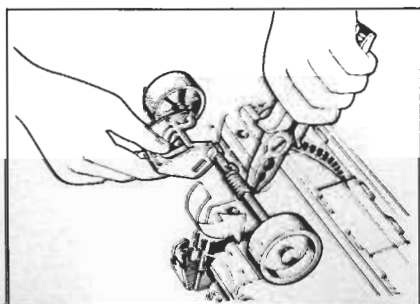

To remove the axle assembly unscrew the three screws and take off the axle clamps. Before replacing, lightly grease the axle. To replace, hook one end of the spring on the axle the grip the other end with a pair of pliers and turn about a quarter of a turn. Keeping the wheels at the ends of the axle press the axle assembly back into place.


Parts List

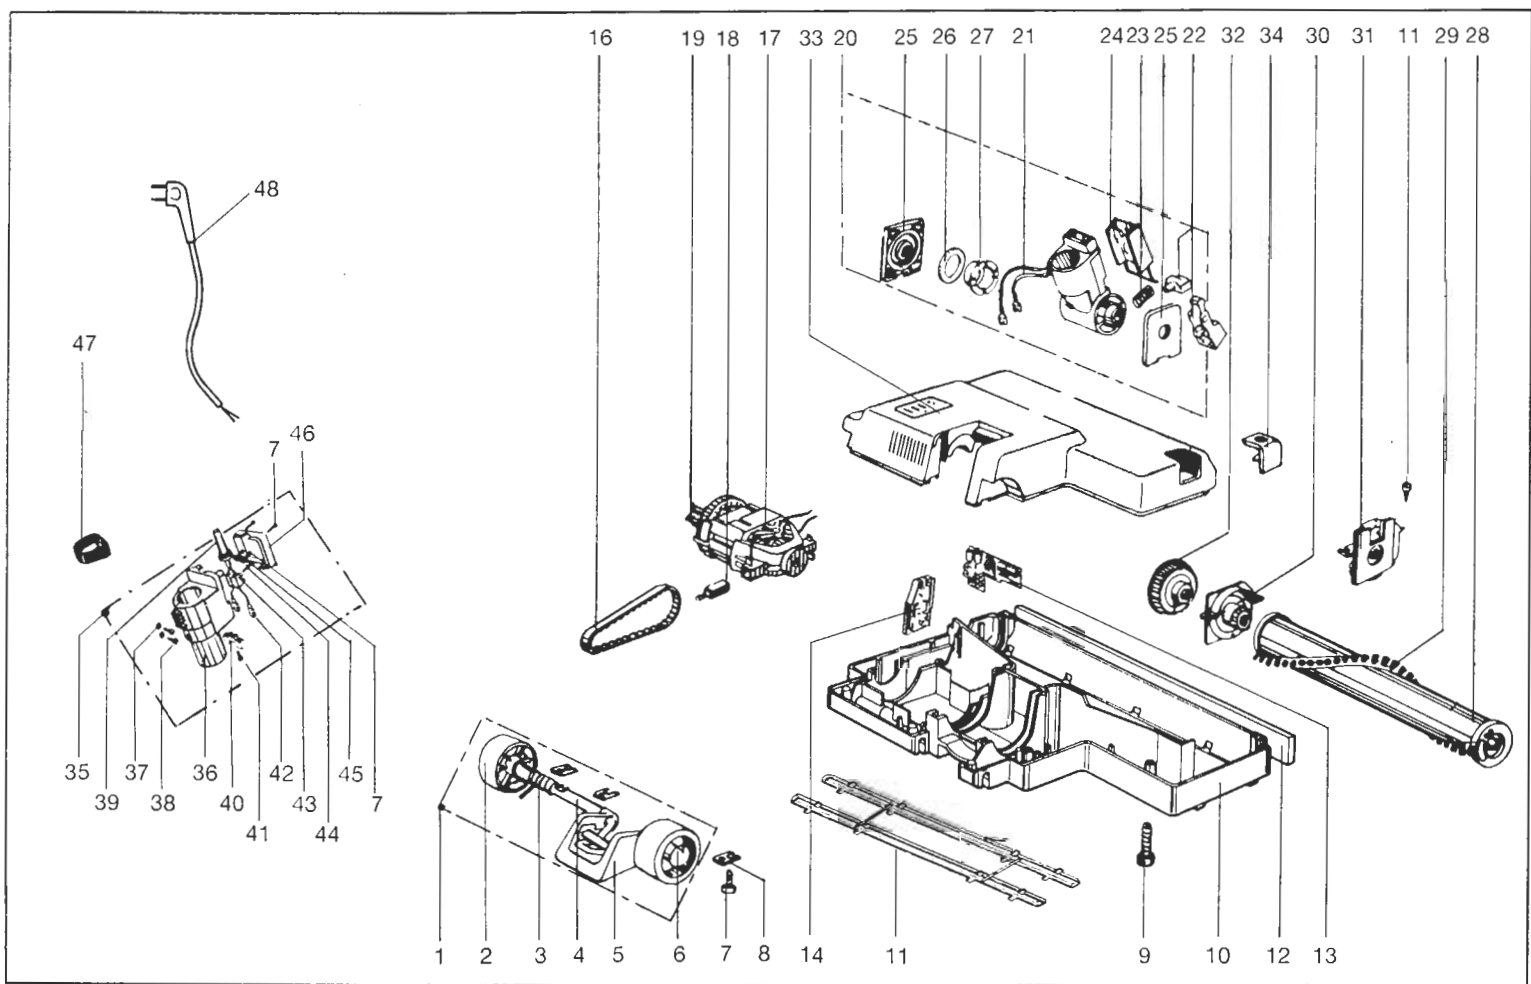

Item No.	Part. No.	Description
1	2008	Axle 350 assembly
2	2012 ER	Wheel
3	2010	Spring
4	2009	Axle 350
5	2011	Foot pedal
6	0308	End clip
7	0102	Screw F 3,9 x 13 DIN 7981
8	2014	Axle clamp
9	0110 TL	Screw AM 5 x 25 DIN 7985
10	2002 sw	Chassis 350e, cpl. (incl. Pos. 11 + 12)
11	2005 ER	Metal plate 350-Set
12	2007 sw	Bumper 350
13	2476 ER	Printed circuit board
14	2079	Bearing plate
16	2049	Drive belt
17	2101 ER	Brush motor 240 V, 150 W
18	05084 S	Carbon brush set/brush motor
19	2025	Motor pulley
20	2477 sw	Swivel assembly 350e
21	0821	Wire on swivel 350e
22	2438 sw	Pluger button, cpl.
23	2423	Spring
24	2022 sw	Swivel neck cover
25	2016 ER	Swivel neck support 350

Item No.	Part. No.	Description
26	0155	Washer
27	2467	Plastic bearing inside
28	2030 ER	Brush assembly cpl. (incl. Pos. 29)
29	2046	Brush strip
	2046 H	Brush strip, hard (optional)
30	2091	Bearing block L.H.
31	2047	Bearing block R.H.
32	2458	Brush roller pulley
33	2482 hg	Powerhead cover
34	2058	Brush strip cover
35	2450	Adapter 32 mm / no cable
36	2413	Adapter 32 mm
37	0131	Nut M4, ST, DIN 562
38	0117	Screw AM 4 x 12, DIN 84
39	1035 sw	Grommet
40	1020	Contact cover
41	0105	Screw 3,9 x 19 DIN 7981
42	0812	Plug socket
43	0502	Terminal block 2-wire
44	0103	Screw 3,9 x 16 DIN 7981
45	1030 UL	Cable clamp
46	2417	Cover for adapter
47	2483	Cord straps
48	2407 NAY	Cable

SEBO 350e Adaptor, Cables with Plugs

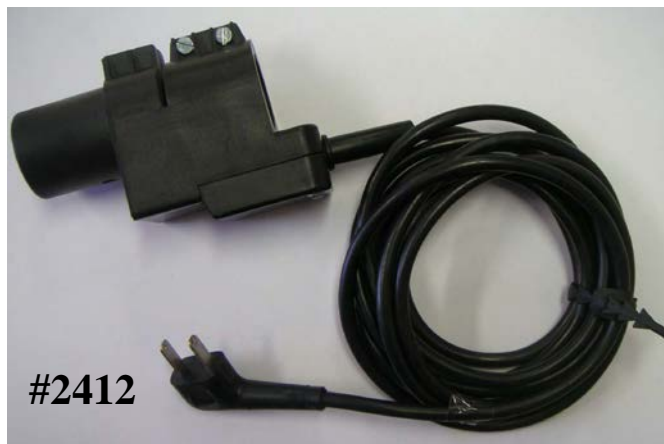

2450 Adaptor
2407NAY Cable 3.2m

